

Lenovo G40 Wireless Disabled by Hardware Switch

Secara default, Hardware Wireless Lenovo G40 dinonaktifkan di Ubuntu 14.04. Untuk mengaktifkannya digunakan perintah:

```
sudo modprobe -r ideapad-laptop
sudo rfkill unblock all
rfkill list all
```

Setelah perintah terakhir diketikkan, cek network manager.

untuk dibuat permanen, ketikkan perintah tersebut ke dalam rc.local pada baris sebelum exit 0

```
sudo gedit /etc/rc.local
```

lihat contoh:

```
modprobe -r ideapad-laptop
rfkill unblock all
rfkill list all
exit 0
```

~~DISQUS~~

From:
<https://wiki.samsul.web.id/> - **Samsul Maarif**

Permanent link:
<https://wiki.samsul.web.id/linux/Lenovo.G40.Wireless.disabled.by.Hardware.switch>

Last update: **2020/12/14 20:13**

